



1

CAUTION: UV Light Source – Disconnect the electrical source of supply to the UV radiation before opening cover
Remove safety screw

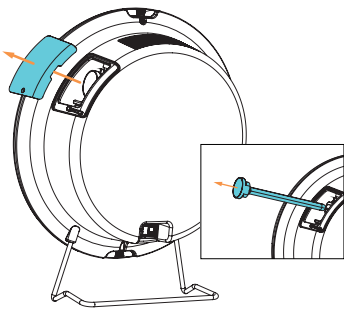


2

Remove bulb cover
(and bulb if already inserted)

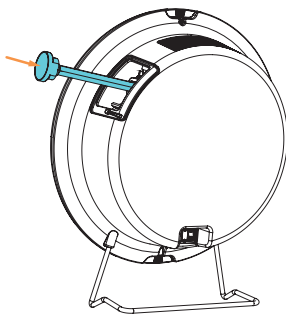

3

Insert new bulb
- align the 4 pins to the female socket connectors

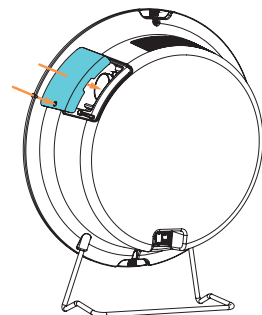

4

Replace bulb cover and fasten the screw



SPHERE | QUICK START GUIDE



11711 W 79th Street
Lenexa, KS 66214
United States of America

Phone: (844) 352-7680
Email: info@synexis.com
Online: synexis.com



Welcome

Thanks for purchasing the Synexis Sphere.
After opening the box, unpack and inspect
your device and bulb for damage.


First use
DO NOT OPERATE THIS DEVICE IF ANY DAMAGE IS NOTED. If the device is damaged,
contact your Synexis Account Representative at (844) 352-7680.

Read full instructions and safety/warning information prior to using this device.

- Included parts:**
- 1 set of filters (1 carbon filter,
1 MERV 11 filter)
 - 1 UV-A bulb
 - 1 power cord
 - 1 stand (already installed)
or wall mount bracket
 - 1 Torx T10 T-Handle screwdriver
(for Locking Screw)
 - 1 Security Torx T10 "L" Shaped tool
(for Bulb Cover)

- When should I replace the following components?**
- carbon filter: approx. 6 months
 - MERV filter: approx. 3 months
 - Sail: approx. 3 months
 - bulb: approx. 2 years
- *Note: The Sail and filters ship separately and need
to be inserted before use.**
- Visit [Synexis.com/manuals](https://www.synexis.com/manuals) for detailed product
information and wall mounting installation instructions.**

Getting to know your device

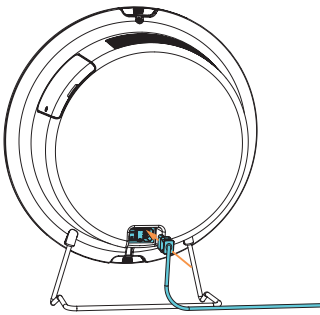


1

On/Off switch and plug


- located on back side of the device
- plug power cable into back
- green indicator will illuminate when power is on

2

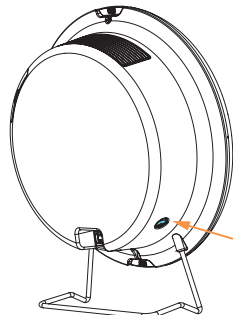


Fan speed control switch

Removing cover (cont.)

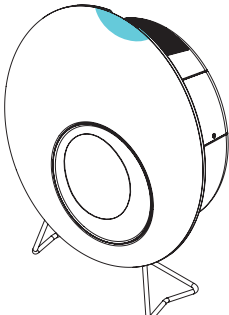

3


Grab the recess on top

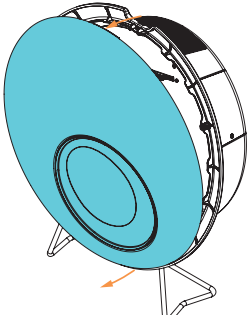

4

**Pull the top and bottom
of the cover to disengage
the magnets**


Removing cover

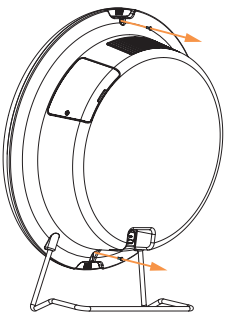


1

Remove safety screws, top and bottom

2

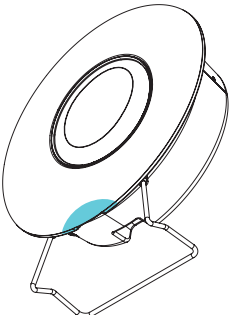


Hold the bottom of the device

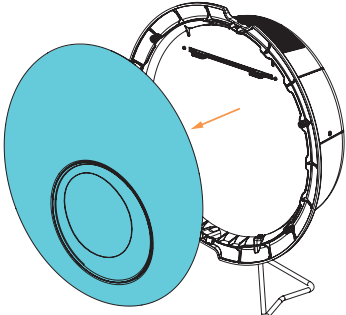

5

Remove the cover

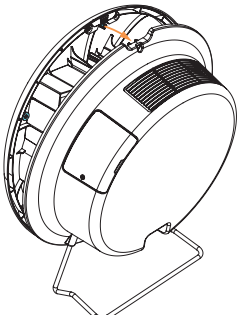


6

Putting the cover back on

- position top and bottom pins over slots
- let magnets reengage
- fasten safety screws


Inserting Sail

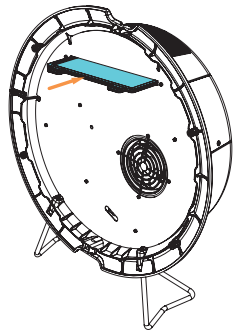

1

**Insert the new Sail
(Sail ships separately)**


Replacing Sail

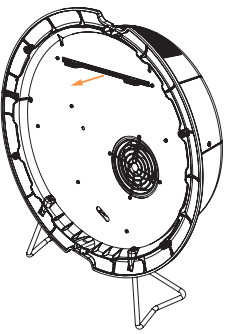

1


**Hold tabs of the Sail
and pull toward you**

Replacing the filters

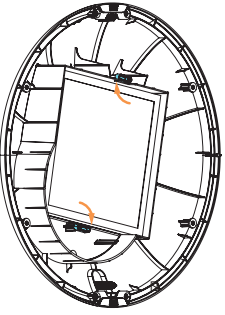


1

Turn the tabs 90°

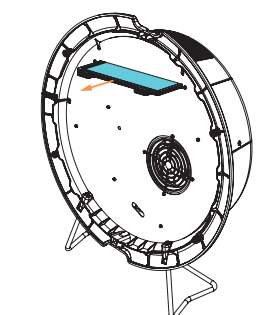


2

Remove and insert the new Sail

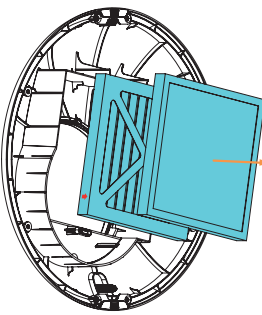

2

Remove the filters

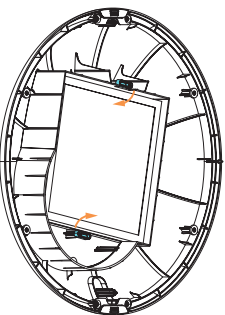

3

Insert new filters and turn tabs to secure

- airflow arrow on MERV 11 filter points
toward unit
- carbon filter on top of MERV 11 filter